

SPARE PARTS LIST

MODEL NO. BHR262

ITEM	PART NO.	DESCRIPTION	QTY	NOTE
001	286263-4	CAP 35	1	
002	233940-9	RING SPRING 19	1	
003	417629-9	CHUCK COVER	1	
004	257241-1	RING 21	1	
005	345187-4	GUIDE WASHER	1	
006	233916-6	CONICAL COMP. SPRING 21-29	1	
007	921923-8	HEX. BOLT M8X120	1	
008	345280-4	HEX. WASHER	1	
009	417630-4	GRIP BASE	1	
010	158057-6	GRIP 36 COMPLETE	1	
013	450980-4	CHANGE LEVER	1	
014	233279-0	COMPRESSION SPRING 4	1	
015	453706-3	LOCK BUTTON	1	
016	213278-8	O RING 17	1	
017	158945-7	GEAR HOUSING COMPLETE	1	
018	266351-3	TAPPING SCREW 4X35	4	
019	153290-5	NEEDLE BEARING COMPLETE	1	
020	961017-7	STOP RING E-3	2	
021	417796-0	GUIDE BASE	1	
022	233344-5	COMPRESSION SPRING 4	2	
023	163430-7	LOCK PLATE COMPLETE	1	
024	266374-1	TAPPING SCREW 4X25	2	
025	233929-7	RING SPRING 29	1	
026	267460-1	WASHER 31	1	
027	233401-9	COMPRESSION SPRING 32	1	
028	227109-5	SPUR GEAR 51	1	
029	216022-2	STEEL BALL 7.0	1	
030	158574-6	TOOL HOLDER COMPLETE	1	
031	267229-3	FLAT WASHER 28	1	
032	331769-8	SLEEVE 9	1	
033	324669-9	IMPACT BOLT	1	
034	324402-9	RING 10	1	
035	421955-0	CUSHION RING 13	1	
036	324216-6	O RING CASE	1	
037	213073-6	O RING 9	1	
038	233917-4	RING SPRING 28	1	
039	324214-0	STRIKER	1	
040	213227-5	O RING 16	1	
041	318132-2	PISTON CYLINDER	1	
042	346036-8	GUIDE PLATE	1	
043	324215-8	PISTON JOINT	1	
044	234098-7	COMPRESSION SPRING 14	1	
045	211012-0	BALL BEARING 606ZZ	1	
046	961003-8	RETAINING RING S-7	1	
047	233343-7	COMPRESSION SPRING 7	1	
048	227179-4	SPUR GEAR 10	1	
049	325976-3	CAM SHAFT	1	
050	331992-5	CLUTCH CAM	1	
051	219014-0	SWASH BEARING 10	1	
052	325640-6	SLEEVE 9	1	
053	227549-7	SPIRAL BEVEL GEAR 26	1	
054	266273-7	HEX. SOCKET HEAD BOLT M4X12	2	
055	346038-4	BEARING RETAINER B	1	
056	211032-4	BALL BEARING 608ZZ	1	
057	324212-4	RING 8	1	
058	961011-9	STOP RING E-4	1	
059	941102-2	FLAT WASHER 5	1	
060	233342-9	COMPRESSION SPRING 6	1	
061	345220-2	CHANGE PLATE	1	
062	922148-7	HEX. SOCKET HEAD BOLT M4X25	2	
063	158944-9	INNER SUPPORT COMPLETE	1	

SPARE PARTS LIST

MODEL NO. BHR262

ITEM	PART NO.	DESCRIPTION	QTY	NOTE
064	213728-3	O-RING 68	1	
065	318392-6	INNER HOUSING	1	
066	443143-9	FILTER	1	
067	424185-2	CAP	1	
068	234097-9	COMPRESSION SPRING 10	2	
069	266273-7	HEX. SOCKET HEAD BOLT M4X12	2	
070	213231-4	OIL SEAL 15	1	
071	213437-4	O RING 28	1	
072	632828-4	YOKE UNIT	1	
073	961082-6	RETAINING RING WR12	1	
074	331596-3	SLEEVE 12	1	
075	211131-2	BALL BEARING 6001DDW	1	
076	961016-9	STOP RING E-10	1	
077	346037-6	BEARING RETAINER A	1	
078	519235-7	ARMATURE ASS'Y 36V INC. 73-76,79,80	1	
079	240037-7	FAN 44	1	
080	210022-4	BALL BEARING 626DDW	1	
081	631850-8	LIGHT CIRCUIT	1	
082	638945-8	BRUSH HOLDER COMPLETE INC. 86	1	
083	643829-7	HOLDER CAP	2	
084	194928-3	CARBON BRUSH CB-442	1	
085	266326-2	TAPPING SCREW 4X18	2	
086	638945-8	BRUSH HOLDER COMPLETE INC. 82	1	
087	638978-3	TERMINAL UNIT	1	
088	346039-2	SUPPORT PLATE	1	
089	187231-9	HOUSING SET INC. 99	1	
090	188639-0	HANDLE SET INC. 95	1	
091	450981-2	SWITCH LEVER	1	
092	650619-1	SWITCH C3HZ-2A-PBLM	1	
093	450979-9	F/R CHANGE LEVER	1	
094	256261-2	PIN 6	2	
095	188639-0	HANDLE SET INC. 90	1	
096	266326-2	TAPPING SCREW 4X18	4	
097	897473-4	BHR262 SERIAL NO. LABEL	1	
098	344903-1	VIBRATION ISOLATOR PLATE	1	
099	187231-9	HOUSING SET INC. 89	1	
100	897459-8	BHR262 NAME PLATE	1	
101	266326-2	TAPPING SCREW 4X18	9	
102	893038-0	CLEAR LABEL	1	
103	893072-0	CLEAR LABEL	1	
A01	194683-7	GREASE VESSEL SET	1	
A02	324219-0	DEPTH GAUGE	1	
A03	443122-7	CLOTH	1	
A04	194873-2	BATTERY BL3626 SET	2	
A05	451153-2	BATTERY COVER	1	
A06	***DC36RA	DC36RA FAST CHARGER	1	
A07	141407-2	PLASTIC CARRYING CASE COMPLETE	1	
A08	800D67-0	BHR262RDE PLASTIC CASE LABEL	2	

SERVICE DRAWING

MODEL NO. BHR262

