

# SPARE PARTS LIST

MODEL NO. BPJ180

ITEM	PART NO.	DESCRIPTION	QTY	NOTE
001	922422-3	HEX. SOCKET HEAD BOLT M8X16	2	
002	941202-8	FLAT WASHER 8	2	
003	453219-4	GRIP	1	
004	266361-0	TAPPING SCREW 4X30	4	
005	417771-6	PIN CAP	1	
006	233072-2	COMPRESSION SPRING 8	1	
007	227597-6	SPIRAL BEVEL GEAR 11	1	
008	210042-8	BALL BEARING 629LLB	1	
009	961005-4	RETAINING RING S-9	1	
010	213445-5	O-RING 26	1	
011	317821-6	GEAR HOUSING COVER	1	
012	619295-0	ARMATURE INC. 7-11	1	
013	421977-0	RUBBER RING 13	1	
014	631714-6	LED CIRCUIT	1	
015	638627-2	YOKE UNIT	1	
016	638979-1	ENDBELL COMPLETE	1	
017	896980-4	BPJ180 NAME PLATE	1	
018	266326-2	TAPPING SCREW 4X18	5	
019	419566-3	SWITCH KNOB	1	
020	187839-9	HOUSING SET INC. 25	1	
021	419519-2	SWITCH LEVER	1	
022	650579-7	SWITCH 1246.3223	1	
023	620243-4	CONTROLLER	1	
024	644808-8	TERMINAL	1	
025	187839-9	HOUSING SET INC. 20	1	
026	191971-3	CARBON BRUSH CB-430	1	
027	643954-4	BRUSH HOLDER CAP	2	
028	419518-4	HOLDER CAP COVER	2	
037	213960-9	O RING 5	1	
038	256496-5	SHOULDER PIN 4	1	
039	141400-6	GEAR HOUSING COMPLETE	1	
040	210033-9	BALL BEARING 696ZZ	1	
041	233950-6	RING SPRING 11	1	
042	227598-4	SPIRAL BEVEL GEAR 36	1	
043	962151-6	RETAINING RING R-32	1	
044	211129-9	BALL BEARING 6201DDW	1	
045	326120-5	SPINDLE	1	
046	213622-9	O RING 45	1	
047	318812-0	BEARING BOX	1	
048	911136-9	PAN HEAD SCREW M4X20	4	
050	931203-4	HEX. NUT M5	1	
051	266741-0	PAN HEAD SCREW M5X50	1	
053	326145-9	ROD 10	2	
054	141247-8	FENCE COMPLETE	1	
055	961017-7	STOP RING E-3	2	
056	256689-4	PIN 4	2	
057	318813-8	BASE	1	
058	231282-5	COMPRESSION SPRING 2.4	1	
059	216001-0	STEEL BALL 3.5	1	
060	318814-6	STOPPER	1	
061	266264-8	H.S.SET SCREW(FLAT POINT)M5X6	2	
062	266738-9	+PAN HEAD SCREW M4	1	
063	213008-7	O RING 22.4	1	
064	415252-4	DUST NOZZLE	1	
065	265785-7	THUMB SCREW M5X10	1	
066	232131-9	LEAF SPRING	1	
067	213023-1	O RING 4	1	
068	266737-1	FLAT HEAD SQ. NECK BOLT M6X20	1	

# SPARE PARTS LIST

MODEL NO. BPJ180

ITEM	PART NO.	DESCRIPTION	QTY	NOTE
069	231282-5	COMPRESSION SPRING 2.4	1	
070	216001-0	STEEL BALL 3.5	1	
071	231795-6	TENSION SPRING 8	2	
072	272263-0	LEVER 40	1	
073	252159-1	HEX. NUT M6	1	
074	961014-3	STOP RING E-8	1	
075	253804-1	FLAT WASHER 6	1	
076	224280-6	INNER FLANGE 40	1	
077	224505-8	LOCK NUT 10-40	1	
078	318845-5	BLADE COVER	1	
079	424479-5	RUBBER SPIKE	2	
080	213023-1	O RING 4	1	
A01	123149-0	ANGLE GUIDE ASSEMBLY COMPO-PARTS	1	
A02	123150-5	DUST BAG ASSEMBLY	1	
A03	415579-2	SET PLATE 4	1	
A04	B-20644	CUTTER 100MMX6T	1	
A05	782401-1	LOCK NUT WRENCH 20	1	
A06	***DC18RC	DC18RC FAST CHARGER	1	
A07	194204-5	BATTERY BL1830 SET	2	
A08	450128-8	BATTERY COVER	1	
A09	141533-7	PLASTIC CARRYING CASE COMPLETE	1	
A10	898319-7	BPJ180RFE CASE LABEL	2	

# SERVICE DRAWING

MODEL NO. BPJ180

